


## BEFORE USE:

Please read the instructions carefully. You must inspect the appliance including its cable and plug for any signs of damage. If the product is damaged, DO NOT USE and contact your supplier immediately for refund or replacement.

This product is only suitable for well insulated spaces or occasional use.

# MYZEK®

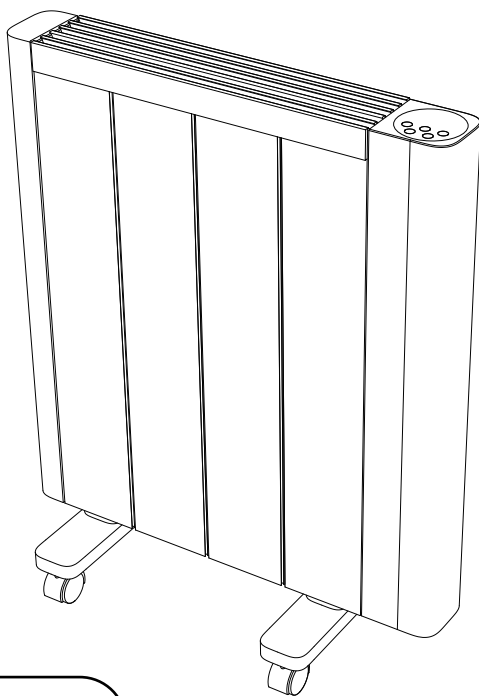

V 2024-07

## INSTRUCTION MANUAL FOR MODELS

### ALUMINUM CERAMIC HEATER

MYAC07-10CW / MYAC07-15CW / MYAC07-20CW

## | GENERAL INFORMATION

Thank you for choosing the Mylek aluminum ceramic heater. Please take time to carefully read and understand the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. If you have any questions concerning operational or technical problems please contact our Customer Services on **0800 091 3171**.

## | BEFORE USING THIS HEATER

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. This includes but is not limited to the following.

### **CAUTION**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge of the product. The appliance is to be operated by responsible adults only after reading and understanding these instructions. Children should be supervised at all times to ensure that they do not play with the appliance. Children under 16 years should not operate the unit or carry out maintenance and/or clean the unit. Any infirmed persons in the vicinity of the unit should be accompanied by a responsible and competent

able bodied adult. Remove the packing and make sure that the appliance is intact. If there is any doubt concerning the integrity of the unit do not use the appliance and contact our recommended after-sales service.

Do not leave any packaging materials within easy reach of children. Before switching on appliance check if the electrical voltage and frequency of the circuit correspond to those indicated on the appliance. Use the appliance only for the stated purpose, namely as a heater for domestic use. Do not use it for any other application as it could be dangerous.

## | IMPORTANT SAFETY REQUIREMENTS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate

and clean the appliance or perform user maintenance.

- CAUTION - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- The heater must not be located immediately below a socket-outlet.
- Means for disconnection having a contact separation in all poles must be incorporated in the fixed wiring in accordance with the wiring rules.
- For correct installation on the wall, thanks to refer to 'Installation on wall' part.
- Fixed heaters are to be installed so that switches and other controls cannot be touched by a person in the bath or shower.



**WARNING:** In order to avoid overheating, do

not cover the heater.

- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- Use this heater on a horizontal and stable surface, or

- install correctly and securely to a wall, as shown in this user manual.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1m from the air outlet.
- **PLEASE NOTE:** Household dust, lit cigarettes, candles and oil burners, combined with the convection effect of electric heaters can cause significant soot deposits to build up on the surface directly above and to the sides of the heater. This is not a fault of the heater. Extensive burning of candles or smoking in the operating environment of this product can produce heavy discolouration within a few months of use.

**Notice to Landlords, Universities, Housing Associations, Charitable Associations Or Other Similar Associations:**

It is your responsibility to your Tenants where these heaters are fitted to make sure Risk Assessments are carried out for these heaters and your Tenant's are fully trained on how to operate this heater correctly and safely. The Tenant's are also given a copy of these user instructions for guidance and understand the importance of reading them and keeping them safe and at hand at all times. The Tenant's should also understand the safety importance of NEVER covering the heater or heater vents at any time for drying or warming garments, or any types of materials. The Tenant's should also be trained about the correct clearance around the heater


at all times. Not following correct guidance and training could result in the unit overheating system activating, risk of fire, injury or even death.

**WARNING:** this product should only be installed in Zone 2 and above only if fitted in a bathroom according the national wiring rules.

Note: The drawing below is for reference only.

If this unit is fitted in a bathroom then it should be fitted by a qualified electrician.

In the case as of buildings room, a room receiving a bath or a shower and socket-outlets lower or equal to 32 A the circuit corresponding must be protected by a device with differential residual current (RCD) lower or equal to 30 mA.

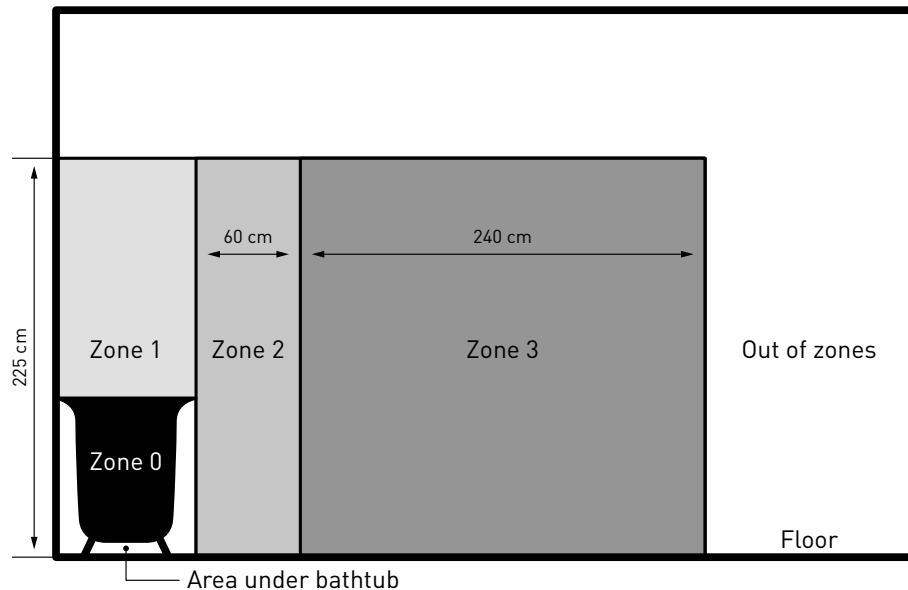


THIS PRODUCT IS FOR ROOM HEATING  
FOR HOUSEHOLD USE ONLY

**| SPECIFICATIONS**


Model No.	FINS	RATED VOLTAGE	RATED POWER
MYAC07-10CW	4	AC220-240V, 50-60Hz	1000W
MYAC07-15CW	5	AC220-240V, 50-60Hz	1500W
MYAC07-20CW	7	AC220-240V, 50-60Hz	2000W

**| STRUCTURE AND PARTS**

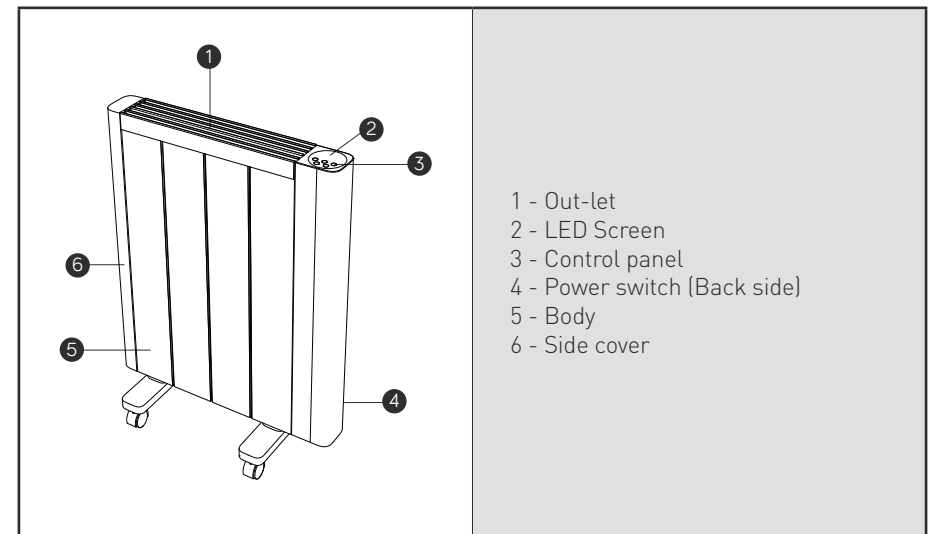

- 1 - Out-let
- 2 - LED Screen
- 3 - Control panel
- 4 - Power switch (Back side)
- 5 - Body
- 6 - Side cover


## | INSTALLATION ON THE WALL

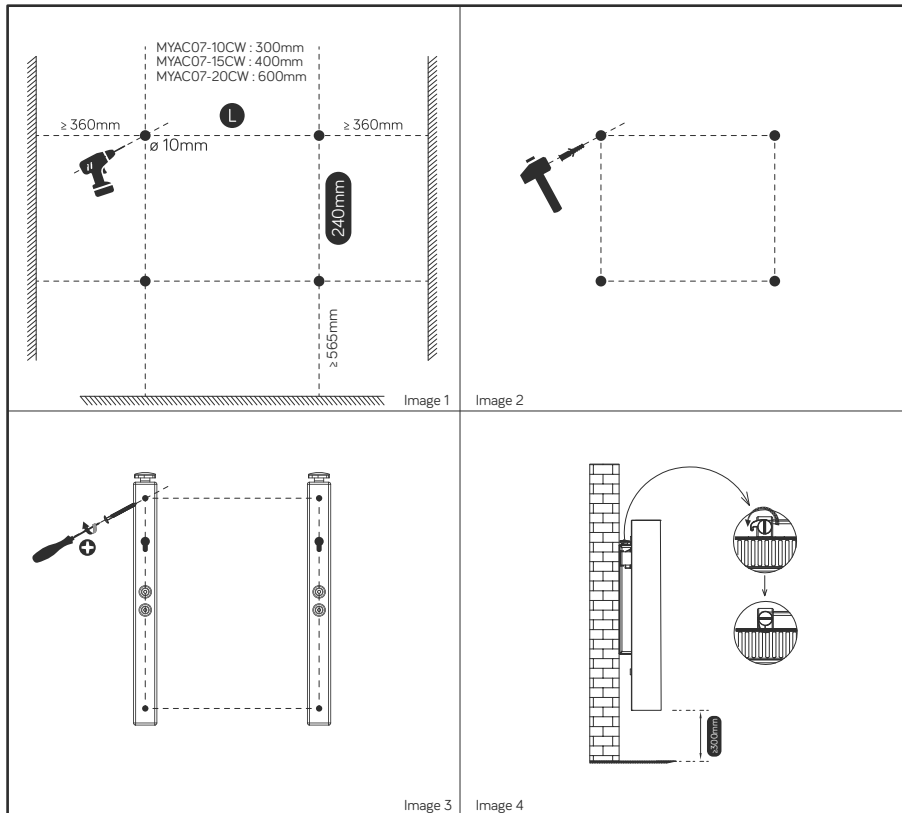

1. Drill holes on the wall according to the instructions below using a 10mm drill bit, please make sure you drill the correct measurements to your model number shown below.
2. Place the wall plugs tube into the drilled holes and secure the bracket to the wall with the screws provided. (Image 3).
3. Hang the unit on the bracket gently, after ensuring the unit is secure, and then turn the lock in the bracket as the picture shows. (Image 4).


**Warning:** Before using the heater, make sure it's mounted securely on the wall.

To fix the feet, pls see the picture as below:

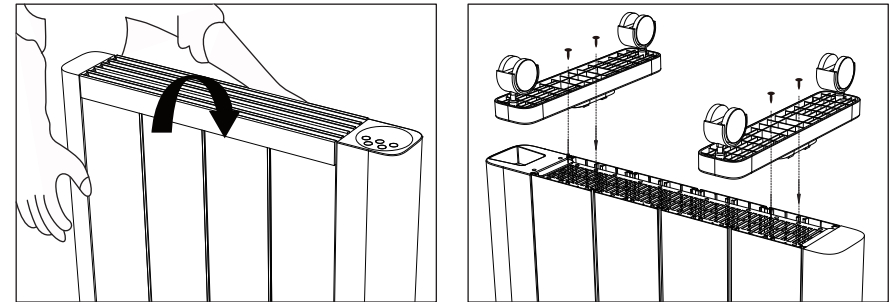

If not use for wall-mounted, pls assembly the feet as above picture.

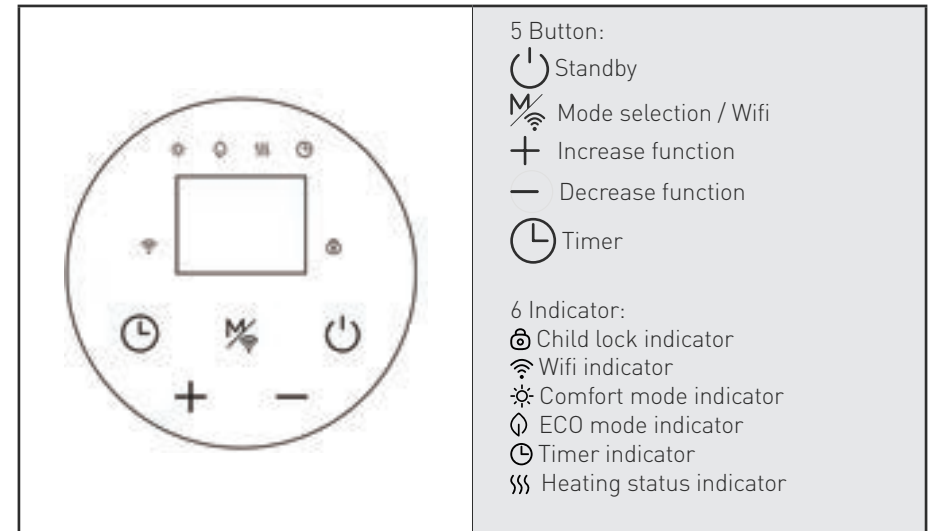

## | CONTROL PANEL AND SCREEN




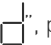 

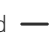 
## | How to use

- Plug the appliance to AC 220-240V 50-60Hz grounded socket, press the power switch at the back of right control box with a beep sound. The backlight of standby


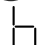 
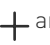 






button  is on.

- Press  button to turn on the heater
- To stop the heater working, press  button to turn off the heater,
- Unplug the product when it's not in use.



## | CLOCK SETTING

  
- Press down  3 secs to enter clock and day of week setting
- The screen display "", press  and  to select the day from 1-7.

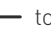
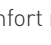 
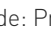 

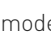 






1	Monday	2	Tuesday
3	Wednesday	4	Thursday
5	Friday	6	Saturday
7	Sunday		

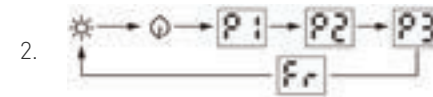
- Press  to confirm day setting and enter the clock hour setting, with the screen display: 
- Press  and  to set the current hour
- Press  to confirm hour setting and enter the minute setting, with the screen display: 
- Press  and  to set the current minute
- Press  to confirm all settings


## | FUNCTIONS SETTING EXPLAINED







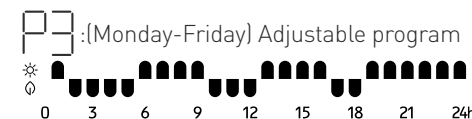 






1. Press  to enter mode selection. By pressing , heating mode runs in a continuous cycle as below:



  -  Comfort mode: Press  and  to set the temperature from 5-35°C.
-  ECO mode: Press  and  to set the temperature from 5-35°C.
- When product is heating, the heating status indicator  would be on. Under the ECO mode, the indicator color would change from red  -orange  -yellow  color, as detected room temp gets closer to target temp, while actual power would lower gradually to save energy.
- Anti-frost mode: the screen display . The target temperature is 7°C. The temperature can't be adjusted.
- P1/P2/P3: Pre-set heating program.
- Note: If the clock and day setting are not finished, the first time to enter P1/P2/P3 program setting, it is requested to set day and clock setting in advance. If power is off, clock and day setting would be reset.



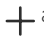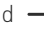





 adjustable program setting

 1. When under P3 mode, press  over 3 secs to enter day setting.
2. The screen displays , press  and  to set from  -  (Monday-Sunday). Press  to confirm and enter hour setting.
3. The screen displays , press  and  to set from (00-23). Press  to choose heating mode for every hour (Comfort mode , ECO mode , show no lights for the unit to operate in anti-frost mode in this hour)
4. Repeat the operation until you have completed the schedule of every hour and every day.





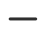


Note: After setting heating mode for hour 23, press  to come back to day setting.

Note: when screen displays , press  finish all setting with display of .

## | COUNTDOWN TIMER FUNCTION

- Press  one time, the screen display "0h" and keeps flashing. press  and  to set timer from 0-24 hours, the timer indicator  is on. The heater will then turn off after the set amount of time has passed.
- Timer quick setting: Press  one time, the screen display "0h", press  each time to select the timer from 0h,2h,4h,6h,8h hour off in a continuous cycle.
 
## | OPEN WINDOW FUNCTION

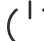
- To turn on open windows function, press  and  until display shows , then it comes back to display target temp after 3 seconds (if there is timer, display remaining time)
- When open window function is on and in heating condition, the detected room temp drops rapidly over 4 degrees in 2 minutes, open window function would be activated, while the screen would display  and flash. The item stops heating. To exit open windows function, press  to return the working mode when open windows function was activated then screen stop flashing , or wait 60 minutes to automatically come back to previous working mode, or press  to enter the

standby condition, the open window function would be reset when the item is turned on again.

- To turn off open windows function, press  and  until display shows , then it comes back to display target temp after 3 seconds (if there is timer, display remaining time)

## | SCREEN CHILD SAFETY LOCK

Please note, during any programming, if the unit controls are not used for 1 minute, the unit display will dim and go into child lock mode. To unlock simply follow the instruction below.

Press  and  together to unlock the control panel.


## | WIFI CONNECTION

Use your phone to scan the QR code below or search for the "TUYA SMART" App to download and generate a free account. You can also visit [www.tuya.com](http://www.tuya.com) for more information. Please note Tuya are constantly developing and upgrading their Apps to make them more user friendly and sometimes, displays may differ slightly to the display shown in this manual due to upgrades. If you have any questions concerning technical problems, please contact our Customer Services on **0800 091 3171** quoting the model number found on the unit rating label.



Select your country code, enter your mobile number and select "Get" to receive a message containing your verification code. Enter your verification code and select "Login".

When the first using to turn on the heater, the WiFi indicator light will flash, connect it in the APP.

Reset the WiFi, press  for 3 secs, the WiFi indicator light will flash rapidly, you can now connect within the APP.

**A Quick connection :**

Turn on your bluetooth in you mobile phone, then set as following steps.



Press "+" in the right-top position and go to next step




Press "Add"



Select 2.4 GHz WiFi Network and enter the password, press next



Wait it's connected and press "Next", the APP will show as below

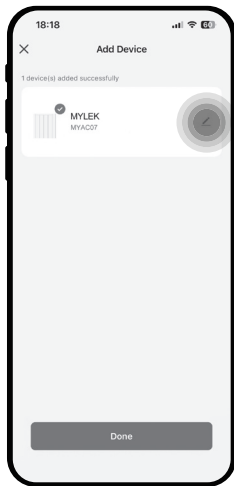

You can press to modify the name of the product

**B Normal connection :**

If the bluetooth is not on, pls follow the next step.



Press "+" in the right-top position and go to next step




Choose small home appliance and heater



Select 2.4 GHz WiFi Network and enter the password, press next




Pls ensure the wifi logo is twinkling, if not, pls long press  for 5 seconds until the WiFi logo start to twinkle



Press "Blink Quickly"





Wait it's connected and press "Done", the APP will show as below

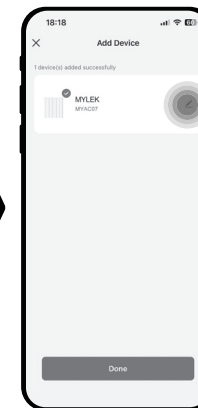

You can press to modify the name of the product




## UI interface :

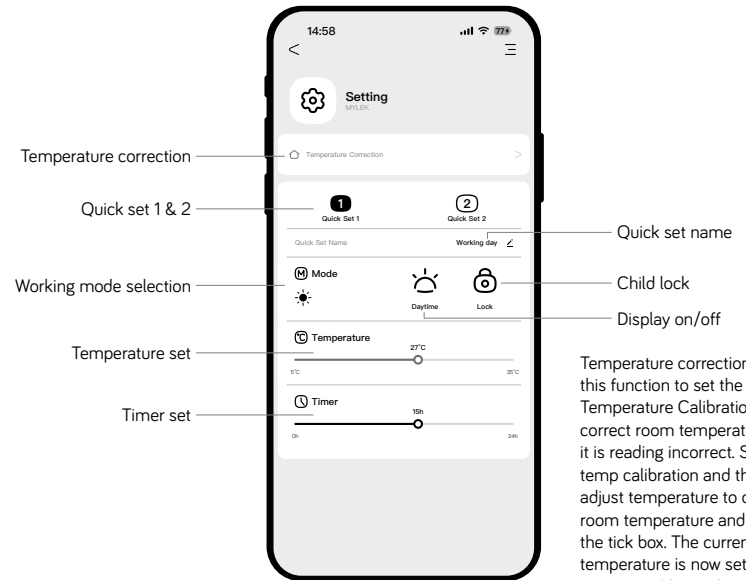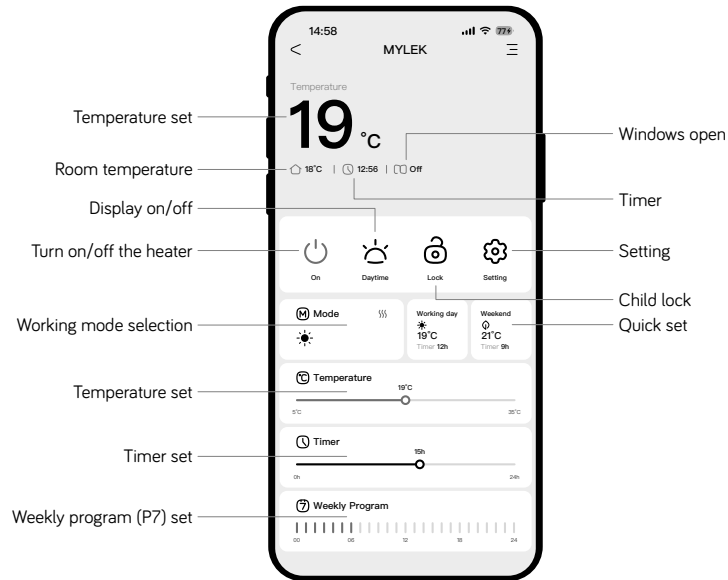

Temperature correction: Use this function to set the Room Temperature Calibration to the correct room temperature if it is reading incorrect. Select temp calibration and then adjust temperature to current room temperature and select the tick box. The current room temperature is now set.

**Note: to calibrate the temperature, pls ensure the heater already worked for more than 1 hour.**  
Customer can preset usual using way in different situation and name it (can keep 2 quick set).

Please note when choosing P1/P2/P3 in the APP, the unit will operate to the settings shown in the manual. If you set P3 manually on the unit and you choose P3 in the APP the unit will operate to the settings you have set. You can also choose to set to your own requirements by selecting the Weekly program P7 within the App.

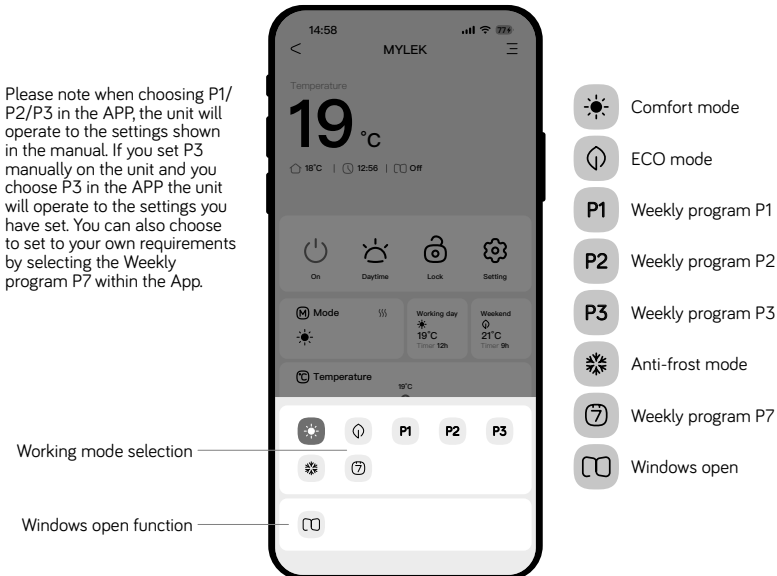

- Comfort mode
- ECO mode
- Weekly program P1
- Weekly program P2
- Weekly program P3
- Anti-frost mode
- Weekly program P7
- Windows open



Weekly program (P7) : Set the working time and working temperature for every hour in everyday.

Information requirements for electric local space heaters

Model identifier(s): MYAC07-10CW			
Item	Symbol	Value	Unit
<b>Heat output</b>			
Nominal heat output	P <sub>nom</sub>	1,00	kW
Minimum heat output (indicative)	P <sub>min</sub>	0,00	kW
Maximum continuous heat output	P <sub>max,c</sub>	1,00	kW
<b>Auxiliary electricity consumption</b>			
At nominal heat output	el <sub>max</sub>	N/A	kW
At minimum heat output	el <sub>min</sub>	N/A	kW
In standby mode	el <sub>sb</sub>	0,00095	kW
Model identifier(s): MYAC07-15CW			
Item	Symbol	Value	Unit
<b>Heat output</b>			
Nominal heat output	P <sub>nom</sub>	1,50	kW
Minimum heat output (indicative)	P <sub>min</sub>	0,00	kW
Maximum continuous heat output	P <sub>max,c</sub>	1,50	kW
<b>Auxiliary electricity consumption</b>			
At nominal heat output	el <sub>max</sub>	N/A	kW
At minimum heat output	el <sub>min</sub>	N/A	kW
In standby mode	el <sub>sb</sub>	0,00095	kW
Contact details	Hygiene Supplies Direct Limited, Ground floor, Tayson House, Methley Road, Castleford WF10 1PA		

Information requirements for electric local space heaters

Model identifier(s): MYAC07-20CW			
Item	Symbol	Value	Unit
<b>Heat output</b>			
Nominal heat output	P <sub>nom</sub>	2,00	kW
Minimum heat output (indicative)	P <sub>min</sub>	0,00	kW
Maximum continuous heat output	P <sub>max,c</sub>	2,00	kW
<b>Auxiliary electricity consumption</b>			
At nominal heat output	el <sub>max</sub>	N/A	kW
At minimum heat output	el <sub>min</sub>	N/A	kW
In standby mode	el <sub>sb</sub>	0,00095	kW
Contact details			
Hygiene Supplies Direct Limited, Ground floor, Tayson House, Methley Road, Castleford WF10 1PA			



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

The importer retains his right to make changes in appearance and completeness of the item without preliminary notification to the customer.

The item is for indoor use only.

The manufacturer does not assume any liability for any damage caused directly or indirectly by not following this instruction manual, general safety rules, or interference in the construction of the product.

## | SERVICE WARRANTY

Hygiene Supplies Direct guarantees the product free from defects in materials and workmanship for a period of 1 year from date of purchase. Should this unit be operated under conditions other than those recommended, at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, then the warranty will be rendered void. The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights. If you have any problems with this product, please call our Help Desk on **0800 091 3171** or email: **[sales@hygienesuppliesdirect.com](mailto:sales@hygienesuppliesdirect.com)**

**MYLEK<sup>®</sup>**

YESSS Electrical, YESSS House, Normanton, WF6 1TN  
declares that the Mylek Heaters are exclusively manufactured  
and imported for Hygiene Supplies Direct Ltd.