

BEFORE USE:


Please read the instructions carefully. You must inspect the appliance including its cable and plug for any signs of damage. If the product is damaged, **DO NOT USE** and contact your supplier immediately for refund or replacement.

This product is only suitable for well insulated spaces or occasional use.

!WARNING!

This heater is an electrical appliance and must not be covered at any time. Covering this heater is dangerous and will cause the unit to malfunction, overheat and is a fire risk!

MYZEK®

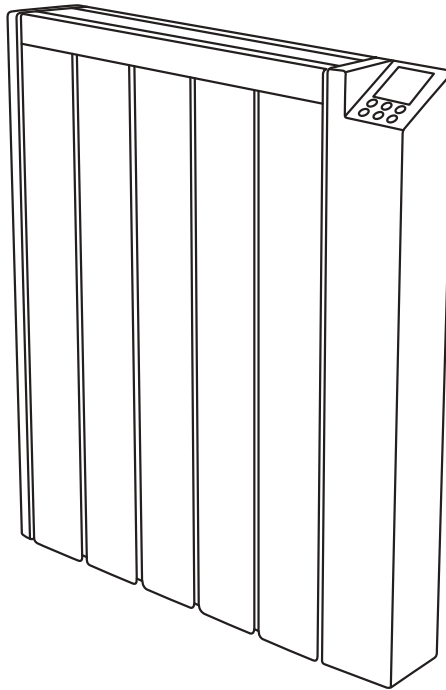

V 2024-10

INSTRUCTION MANUAL FOR MODELS

ALUMINUM CERAMIC HEATER

MYHH0406C / MYHH0410C / MYHH0415C / MYHH0420C

| GENERAL INFORMATION

Thank you for choosing the Mylek aluminum ceramic heater. Please take time to carefully read and understand the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. If you have any questions concerning operational or technical problems please contact our Customer Services on **0800 091 3171**.

| BEFORE USING THIS HEATER

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. This includes but is not limited to the following.

CAUTION

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge of the product. The appliance is to be operated by responsible adults only after reading and understanding these instructions. Children should be supervised at all times to ensure that they do not play with the appliance. Children under 16 years should not operate the unit or carry out maintenance and/or clean the unit. Any infirmed persons in the vicinity of the unit should be accompanied by a responsible and competent

able bodied adult. Remove the packing and make sure that the appliance is intact. If there is any doubt concerning the integrity of the unit do not use the appliance and contact our recommended after-sales service.

Do not leave any packaging materials within easy reach of children. Before switching on appliance check if the electrical voltage and frequency of the circuit correspond to those indicated on the appliance. Use the appliance only for the stated purpose, namely as a heater for domestic use. Do not use it for any other application as it could be dangerous.

| IMPORTANT SAFETY REQUIREMENTS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate

and clean the appliance or perform user maintenance.

- **CAUTION** - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- The heater must not be located immediately below a socket-outlet.
- Means for disconnection having a contact separation in all poles must be incorporated in the fixed wiring in accordance with the wiring rules.
- For correct installation on the wall, thanks to refer to 'Installation on wall' part.
- Fixed heaters are to be installed so that switches and other controls cannot be touched by a person in the bath or shower.



WARNING: In order to avoid overheating, do

not cover the heater.

- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- Use this heater on a horizontal and stable surface, or

install correctly and securely to a wall, as shown in this user manual.

- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1m from the air outlet.
- **PLEASE NOTE:** Household dust, lit cigarettes, candles and oil burners, combined with the convection effect of electric heaters can cause significant soot deposits to build up on the surface directly above and to the sides of the heater. This is not a fault of the heater. Extensive burning of candles or smoking in the operating environment of this product can produce heavy discolouration within a few months of use.

Notice to Landlords, Universities, Housing Associations, Charitable Associations Or Other Similar Associations:

It is your responsibility to your Tenants where these heaters are fitted to make sure Risk Assessments are carried out for these heaters and your Tenant's are fully trained on how to operate this heater correctly and safely. The Tenant's are also given a copy of these user instructions for guidance and understand the importance of reading them and keeping them safe and at hand at all times. The Tenant's should also understand the safety importance of NEVER covering the heater or heater vents at any time for drying or warming garments, or any types of materials. The Tenant's should also be trained about the correct clearance around the heater


at all times. Not following correct guidance and training could result in the unit overheating system activating, risk of fire, injury or even death.

WARNING: this product should only be installed in Zone 2 and above only if fitted in a bathroom according the national wiring rules.

Note: The drawing below is for reference only.

If this unit is fitted in a bathroom then it should be fitted by a qualified electrician.

In the case as of buildings room, a room receiving a bath or a shower and socket-outlets lower or equal to 32 A the circuit corresponding must be protected by a device with differential residual current (RCD) lower or equal to 30 mA.

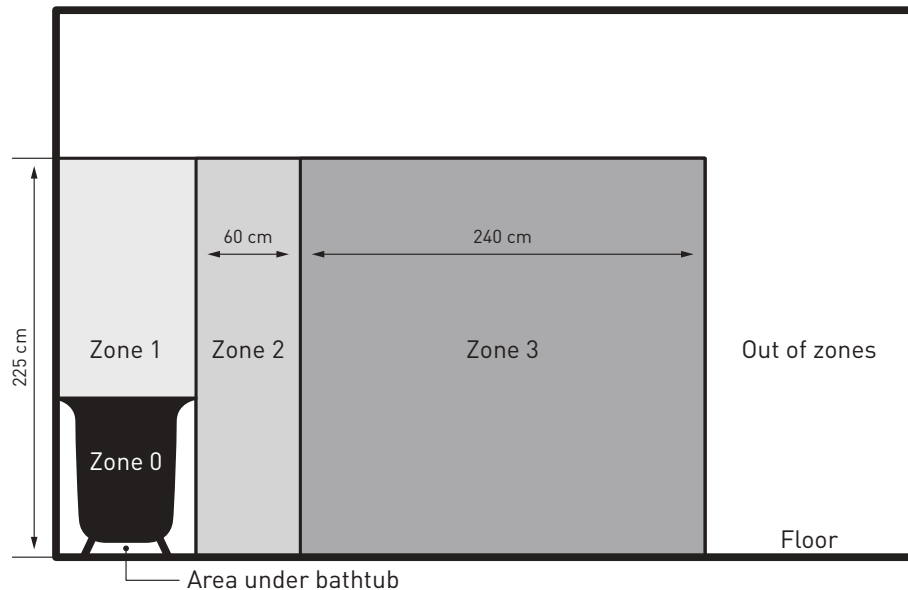


THIS PRODUCT IS FOR ROOM HEATING
FOR HOUSEHOLD USE ONLY


| SPECIFICATIONS

Model No.	FINS	RATED VOLTAGE	RATED POWER
MYHH0406C	3	AC220-240V, 50-60Hz	600W
MYHH0410C	4	AC220-240V, 50-60Hz	1000W
MYHH0415C	5	AC220-240V, 50-60Hz	1500W
MYHH0420C	7	AC220-240V, 50-60Hz	2000W

| STRUCTURE AND PARTS

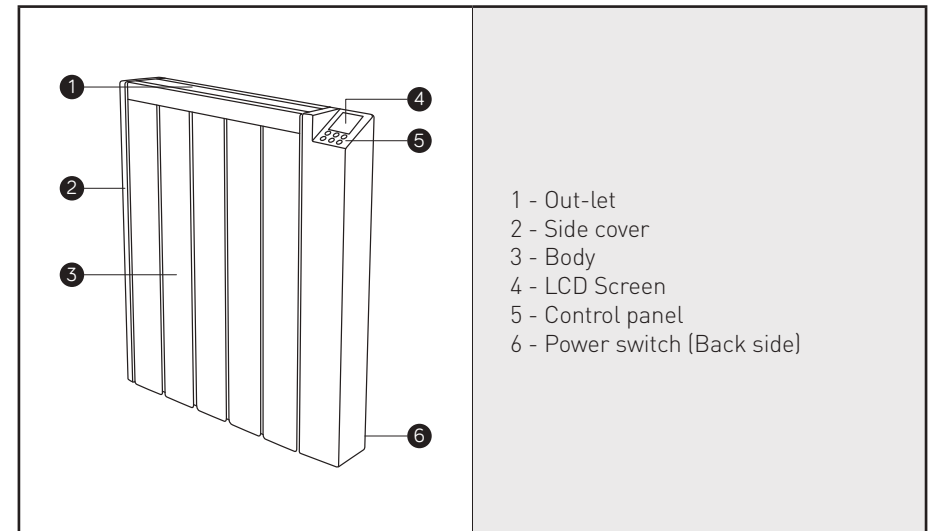


I INSTALLATION ON THE WALL

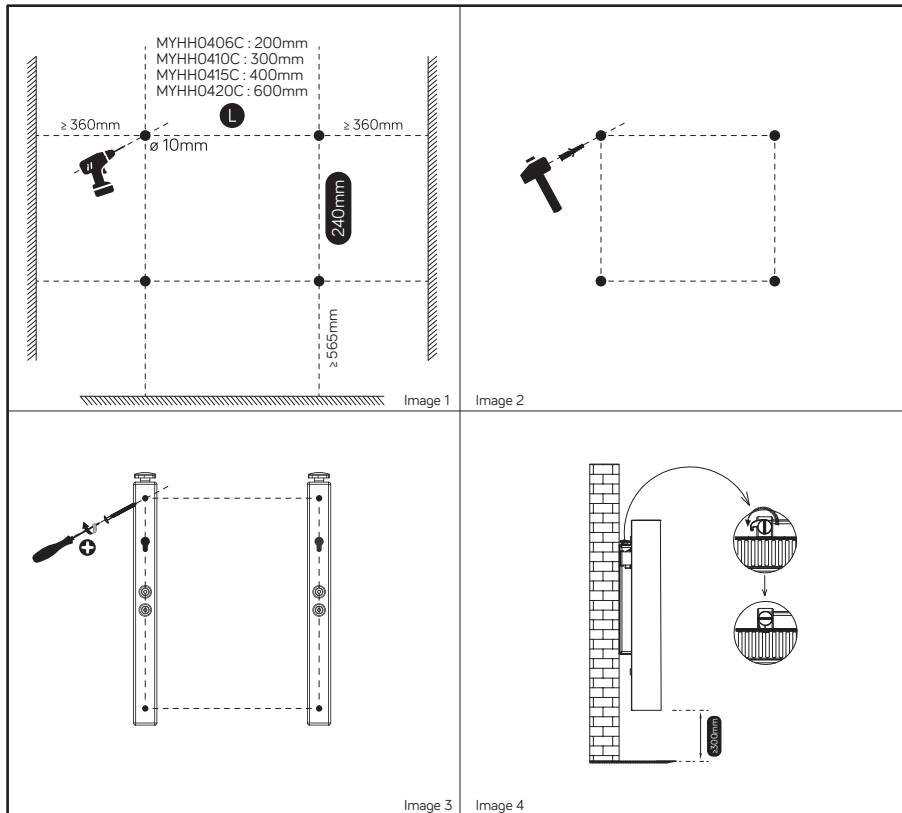

1. Drill holes on the wall according to the instructions below using a 10mm drill bit, please make sure you drill the correct measurements to your model number shown below.
2. Place the wall plugs tube into the drilled holes and secure the bracket to the wall with the screws provided. (Image 3).
3. Hang the unit on the bracket gently, after ensuring the unit is secure, and then turn the lock in the bracket as the picture shows. (Image 4).


Warning: Before using the heater, make sure it's mounted securely on the wall.

To fix the feet, pls see the picture as below:

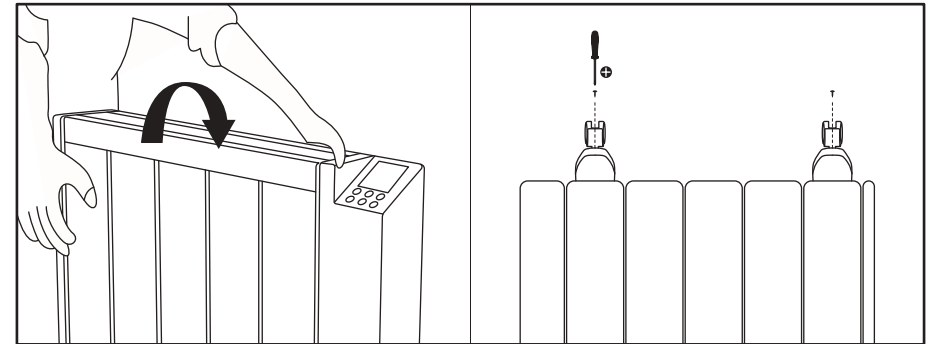

If not use for wall-mounted, pls assembly the feet as above picture.

I CONTROL PANEL AND SCREEN

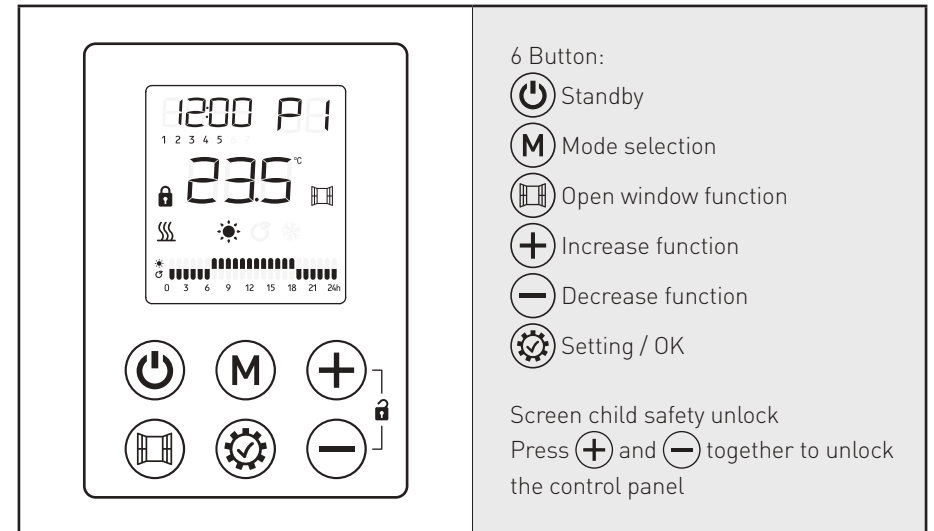

| QUICK START (BASIC OPERATION)

Press to turn on the screen, the unit will work under COMFORT mode , press or to set the desired temperature, symbol will show when the unit is in heating mode and turn off when the set temperature is reached.

| CLOCK SETTING


Before setting the program, the clock will require setting before using the P1/P2/P3 programs, only when the clock is set can the programs work correctly.

Press and hold for around 3 seconds and the clock hour setting will flash, press or to set the current hour (0-23), then press once and the minute setting will flash, press or to set the current minutes (0-59), then press once and the day setting will flash, press or to set the current day 1-7 (1 being Monday, 2 Tuesday and so on), press to complete the time and day setting.

If you ever need to reset the time and day due to power loss or unplugging from the power source, please repeat the above instructions.

| FUNCTIONS SETTING EXPLAINED

 1. Press to choose the mode or the program;



2. Press or to choose the temperature.

- Comfort mode: Setting temperature from 5°C to 35°C
- ECO mode: Setting temperature from 1.5°C to 31.5°C; which is 3.5°C less than the comfort mode.
- Anti-Frost mode: Works on a Setting of 7°C ; Anti-Frost cannot be changed. A standard temperature of 7 – 8°C where, when activated, the unit works at this lower temperature without increasing consumption to prevent freezing.

| SCREEN CHILD SAFETY LOCK


Please note, during any programming, if the unit controls are not used for 1 minute, the unit display will dim and go into child lock mode. To unlock simply follow the instruction below.

Press and together to unlock the control panel.

| PROGRAM SETTINGS

The unit has three programs which can be modified according to your requirements. The following pages follow you through the steps on how to program each program individually. Please take time to practice and learn how to program the units. If at any time you need assistance, please call our dedicated Help Desk on **0800 091 3171** or email: sales@hygiensuppliesdirect.com who will only be too happy to help.

Setting Program P1: This program operates the same time and mode you preset from Monday to Sunday.

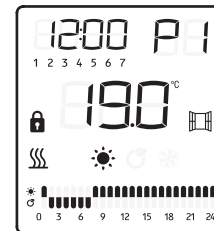


Example: Monday – Sunday


- Press until the program **P1** is displayed, then press once to modify the program.
- **P1** and the first hour bar and modes , , and start to flash.
- Press to choose the mode you require for this hour either , , or .
- Once the mode is selected press to move to the next hour or if you wish to move back to the previous hour to change your mode.
- Repeat this process for every hour choosing your required mode for each hour until you have set 24 hours. Then press to confirm your 24 hour settings.
- The unit is now set for **P1**, the current hour will flash showing and also show the mode symbol set for that hour.

- **P1** will now operate to your set time and mode the same each day Monday-Sunday. The unit memory will remember your settings for this program unless the unit is switched off from the power source for a period of time.

Setting Program P2: This program operates the same set time and mode you set from Monday to Friday and same program from Saturday to Sunday.

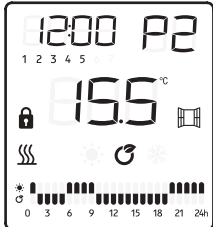


Example: Monday to Friday

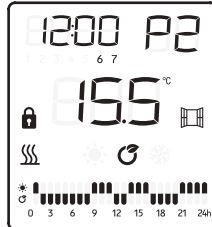


Example: Saturday to Sunday

- Press **(M)** until the program **P2** is displayed, then press **(⚙)** once to modify the program.
 - **P2** and the first hour bar and modes ***0** start to flash and days **12345** are displayed.
 - Press **(M)** to choose the mode you require for this hour either **☀**, **🌀** or **❄**.
 - Once the mode is selected press the **(+)** to move to the next hour or **(-)** if you wish to move back to the previous hour. Repeat this process for every hour choosing your required mode for each hour until you have set 24 hours.
 - Then press **(⚙)** to confirm your 24 hour settings, the unit is now set for **P2** for Monday-Friday **12345**.
 - **67** now displays for days Saturday-Sunday and can be set by repeating the above process and choosing the mode for each hour up to 24 hours.
 - One set then press **(⚙)** to confirm your 24 hour settings, the unit is now set for **P2** for Saturday - Sunday **67**.
 - The unit is now set for **P2** and the current hour will flash showing the mode symbol set for that hour.
 - **P2** will now operate your set time each day Monday-Friday and Saturday-Sunday. The unit memory will remember your settings for this program unless the unit is switched off from the power source for a period of time.
- Need assistance please call our dedicated Help Desk on **0800 091 3171** or email: sales@hygienesuppliesdirect.com who will only be too happy to help.

Setting program P3: This program lets you set the time and mode for each individual day Monday – Sunday and is usually the user preferred program.

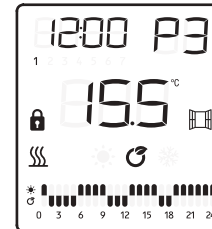

Monday

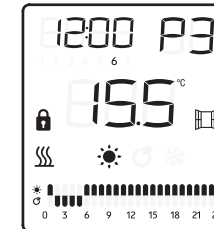

Saturday

- Press **(M)** until the program **P3** is displayed, then press **(⚙)** once to modify the program.
- **P3** and the first hour bar and modes ***0** start to flash.
- Press **(M)** to choose the mode you require for this hour either **☀**, **🌀** or **❄**.
- Once the mode is selected press the **(+)** to move to the next hour or **(-)** if you wish to move back to the previous hour.
- Repeat this process for every hour, choosing your required mode for each hour until you have set 24 hours. Then press **(⚙)** to confirm your 24 hour settings for this day. The display will then move to day 2 (Tuesday).
- Tuesday is now ready to set to your requirements, repeat the above process until all days 1-7 are set to your requirements.
- Once day 7 (Sunday) is set press **(⚙)** to confirm and the unit display will revert to the current day, hour and mode and continue to work to your set requirements. The unit memory will remember your settings for this program, unless the unit is switched off from the power source for a period of time.

Need assistance please call our dedicated Help Desk on **0800 091 3171** or email: sales@hygienesuppliesdirect.com who will only be too happy to help.

| OPEN WINDOW DETECTION FUNCTION

Press **(☑)** to turn on/off the windows function. When the logo displays on the screen, it means window function is active. When the function is active, a drop in temperature by 2°C in less than 2 minutes means the heater detects a open window and will stop working and the window logo **☑** will flash. This is an energy saving function.

Press  and the heater will go back to former running program and the windows logo will stop flashing.

MAINTENANCE

1. Always disconnect the appliance and let it completely cool before any maintenance.
2. Use a vacuum cleaner to remove dust on grilles.
3. Clean the outside of the unit with a damp cloth and then dry it with a dry cloth. Never immerse the unit in water, nor let water drip into the unit.

STORING

1. Always disconnect the appliance, let it completely cool and clean it before storing.
2. If you do not use the device for a long period, put back the unit and the instruction manual to the original carton and store in a dry and ventilated place
3. Do not place any heavy items on top of carton during storing as this may damage the appliance.

Information requirements for electric local space heaters

Model identifier(s): MYHH0406C					
Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	0.60	kW	Manual heat charge control, with integrated thermostat	[no]
Minimum heat output (indicative)	P _{min}	0.60	kW	Manual heat charge control with room and/or outdoor temperature feedback	[no]
Maximum continuous heat output	P _{max,c}	0.60	kW	Electronic heat charge control with room and/or outdoor temperature feedback	[no]
Auxiliary electricity consumption				Fan assisted heat output	
At nominal heat output	el _{max}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	el _{min}	N/A	kW	Single stage heat output and no room temperature control	[no]
In standby mode	el _{sb}	0.00014	kW	Two or more manual stages, no room temperature control	[no]
Model identifier(s): MYHH0410C				With mechanic thermostat room temperature control	
Item	Symbol	Value	Unit	With electronic room temperature control	
Heat output				Electronic room temperature control plus day timer	
Nominal heat output	P _{nom}	1.00	kW	Electronic room temperature control plus week timer	
Minimum heat output (indicative)	P _{min}	1.00	kW	Other control options (multiple selections possible)	
Maximum continuous heat output	P _{max,c}	1.00	kW	Room temperature control, with presence detection	
Auxiliary electricity consumption				Room temperature control, with open window detection	
At nominal heat output	el _{max}	N/A	kW	With distance control option (WiFi Option)	
At minimum heat output	el _{min}	N/A	kW	With adaptive start control	
In standby mode	el _{sb}	0.00014	kW	With working time limitation	
Contact details				With black bulb sensor	
Hygiene Supplies Direct Limited, Ground floor, Tayson House, Methley Road, Castleford WF10 1PA					

Information requirements for electric local space heaters

Model identifier(s): MYHH0415C			
Item	Symbol	Value	Unit
Heat output			
Nominal heat output	P _{nom}	1.50	kW
Minimum heat output (indicative)	P _{min}	1.50	kW
Maximum continuous heat output	P _{maxc}	1.50	kW
Auxiliary electricity consumption			
At nominal heat output	el _{max}	N/A	kW
At minimum heat output	el _{min}	N/A	kW
In standby mode	el _{sb}	0.00014	kW
Model identifier(s): MYHH0420C			
Item	Symbol	Value	Unit
Heat output			
Nominal heat output	P _{nom}	2.00	kW
Minimum heat output (indicative)	P _{min}	2.00	kW
Maximum continuous heat output	P _{maxc}	2.00	kW
Auxiliary electricity consumption			
At nominal heat output	el _{max}	N/A	kW
At minimum heat output	el _{min}	N/A	kW
In standby mode	el _{sb}	0.00014	kW
Contact details	Hygiene Supplies Direct Limited, Ground floor, Tayson House, Methley Road, Castleford WF10 1PA		

Item	Unit
Type of heat input, for electric storage local space heaters only (select one)	
Manual heat charge control, with integrated thermostat	[no]
Manual heat charge control with room and/or outdoor temperature feedback	[no]
Electronic heat charge control with room and/or outdoor temperature feedback	[no]
Fan assisted heat output	[no]
Type of heat output/room temperature control (select one)	
Single stage heat output and no room temperature control	[no]
Two or more manual stages, no room temperature control	[no]
With mechanic thermostat room temperature control	[no]
With electronic room temperature control	[no]
Electronic room temperature control plus day timer	[no]
Electronic room temperature control plus week timer	[yes]
Other control options (multiple selections possible)	
Room temperature control, with presence detection	[no]
Room temperature control, with open window detection	[yes]
With distance control option (WiFi Option)	[no]
With adaptive start control	[no]
With working time limitation	[yes]
With black bulb sensor	[no]



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

The importer retains his right to make changes in appearance and completeness of the item without preliminary notification to the customer.

The item is for indoor use only.

The manufacturer does not assume any liability for any damage caused directly or indirectly by not following this instruction manual, general safety rules, or interference in the construction of the product.

SERVICE WARRANTY

Hygiene Supplies Direct guarantees the product free from defects in materials and workmanship for a period of 1 year from date of purchase. Should this unit be operated under conditions other than those recommended, at voltages other than the voltage indicated on the unit, or any attempts made to service or modify the unit, then the warranty will be rendered void. The product you buy may sometimes differ slightly from illustrations. This warranty is in addition to, and does not affect, your statutory rights. If you have any problems with this product, please call our Help Desk on **0800 091 3171** or email: sales@hygienesuppliesdirect.com

MYLEK[®]

YESSS Electrical, YESSS House, Normanton, WF6 1TN
declares that the Mylek Heaters are exclusively manufactured
and imported for Hygiene Supplies Direct Ltd.