

Product code

SCR0190, SCR0191, SCR0192,
SCR0193, SCR0194

Description


Fixed/Hinged Screen Kit

Dimensions (mm) HxWxD


SCR0190 – Kit 650mm x 950mm
SCR0191 – Kit 950mm x 950mm
SCR0192 – Kit 950mm x 1250mm
SCR0193 – Kit 1250mm x 1250mm
SCR0194 – Kit 1250mm x 1550mm

FIXED/HINGED SCREEN KIT


- Instruction booklet
- Notice d'utilisation
- Bedienungsanleitungssprachen
 - Libretto istruzioni
 - Instrukcję
- Manual de instrucciones
- livreto de instruções
 - Instructieboekje
 - Instruktsboken

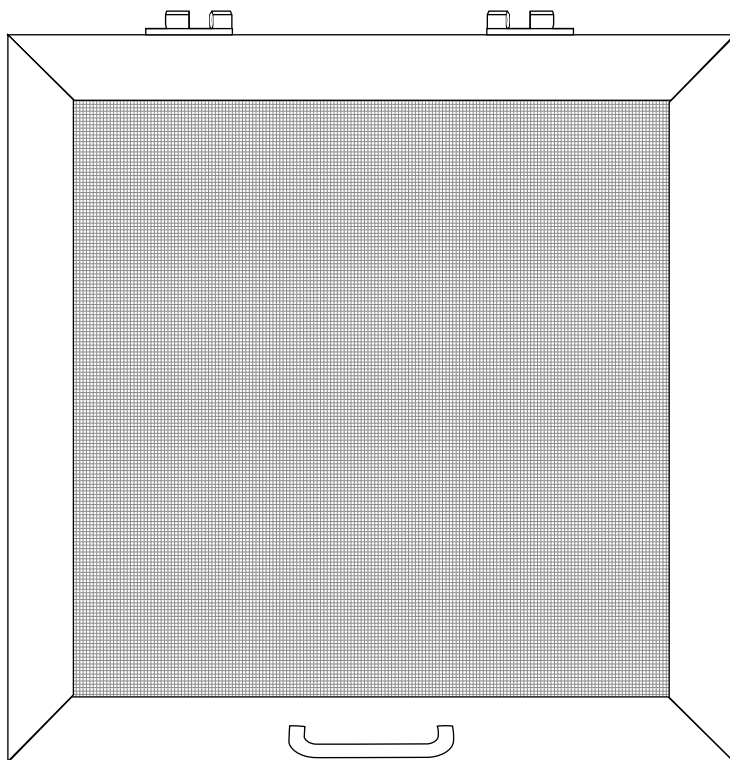


1. Measure the window frame

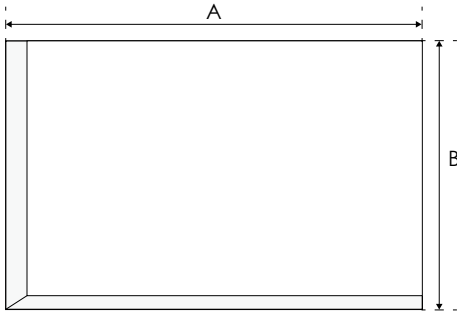


2. If necessary cut down the metal frame to meet the size required, ensuring that the corner is cut at a 45° angle

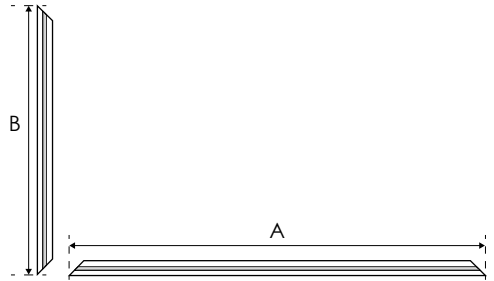


3. Insert the corner cleats into each corner of the frame using a rubber mallet

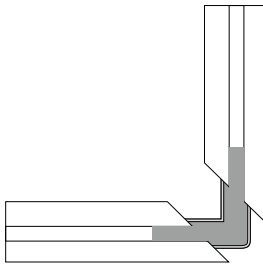


4. Place the mesh over the screen

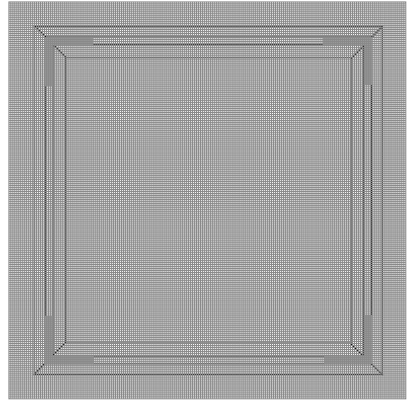


5. Roll in the beading using the roller tool whilst keeping the mesh tight

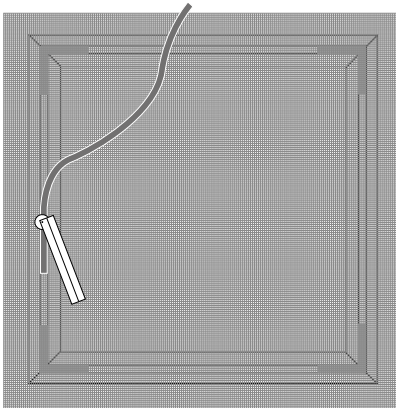

6. Trim the beading

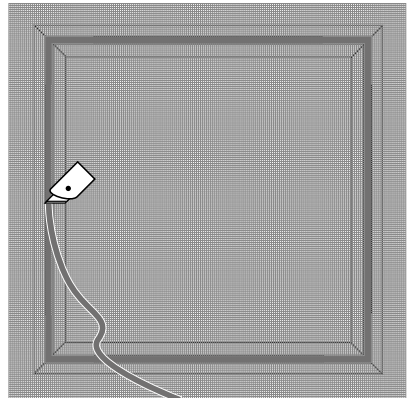


7. Trim the excess mesh from the outside edge

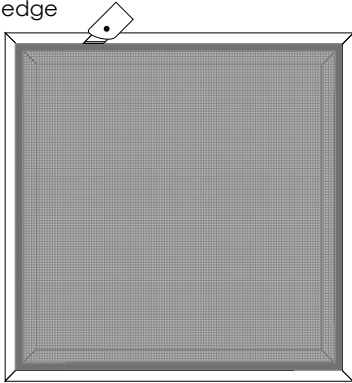



9. If a hinged screen is required, locate the 2 hinges 100mm from each end of the frame. Drill the holes using a 2.5mm size drill bit and secure with no. 4 1/2 counter-sunk screws

10. If a hinged screen is required, drill the holes for the handle 7mm from the outside edge of the frame, 96mm apart (see template). Drill the holes using a 4.5mm size drill bit countersinking for a neater finish. Secure with no. 6 3/4 countersunk screws. We recommend that the handle is placed on the centre of the frame opposite the hinges

11. Remove the plastic backing on the woolpile and apply to the edges of the frame

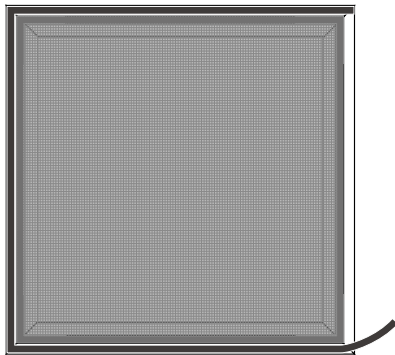


8. Re-roll the beading to ensure that it is secure

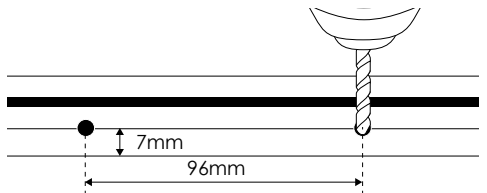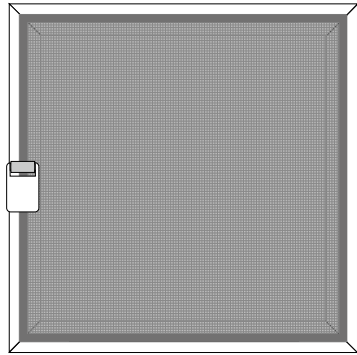

12. Hold the screen against the window with the hinges fitted and mark with a pencil around the hinge to fix the receiving hinge. Drill the holes using a 2.5mm drill. Fix the receiving hinge onto the window using the no.4 x 1/2 screws provided. Fit the screen onto the hinge and push through the location pin.

13. Once the screen is fitted, hold a retaining clip against the screen and mark a hole for the fixing. Drill with a 3.5mm drill. Using the no.8 x 1 pan screws provided, fix the retaining clips to the window. The screen can now be locked onto the window. To release the screen to open the window turn the retaining clips.

HANDLE TEMPLATE

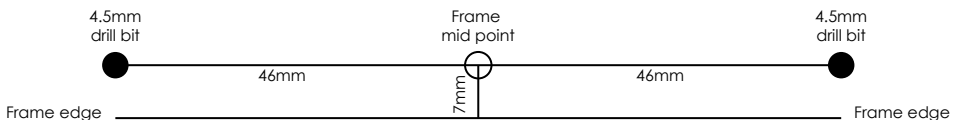


FIXED/HINGED SCREEN KIT

- Instruction booklet
- Notice d'utilisation
- Bedienungsanleitungssprachen
- Libretto istruzioni
- Instrukcje
- Manual de instrucciones
- livreto de instruções
- Instructieboekje
- Instruktionsboken

Kit contains

Corner cleats
(x4)

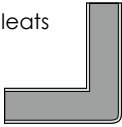


Metal frame (x4)



Beading



 Insect mesh




6mm Woolpile




Handle




Retainer clips
(x8)

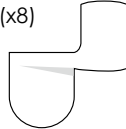

Hinges (x2)

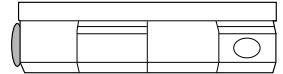

No.8 x 1 pan screws
(x8)

 


No.6 x 3/4 screws
(x2)



No.4 x 1/2 screws
(x14)



 Roller tool



You will also need:

- Tape measure
- Drill
- 2.5 mm size drill bit
- 3.5 mm drill bit
- 4.5 mm drill bit
- Stanley knife
- Rubber mallet

V080113

P+L Systems®

Sterling House
Grimbald Crag Close
Knaresborough
North Yorkshire
HG5 8PJ UK

T +44 (0)800 988 5359
F +44 (0)1423 863 497
W www.pandlsystems.com
W www.insect-o-cutor.co.uk
E info@pandlsystems.com



INVESTORS
IN PEOPLE